

## PART 1: GETTING STARTED



### 1 START UP YOUR TABLET

Your tablet takes around 40 seconds to power on. Simply press and hold the side power/lock button on the upper right corner of the side of the tablet until you see the Samsung logo on the screen. The lock screen will appear when the tablet is ready to use.



### 2 SWIPE TO OPEN

Swipe to open the locked screen. The tablet is already connected to the Internet. You will see applications you can use on your home screen. Touch any app icon to open the program.



### 3 SIGN IN TO CHROME


Sign in to Chrome with your Google (Gmail) account or browse the Internet as a guest.

\*When you sign in with your own account, Google will remember your preferences.


\*When you sign in as a Guest, your preferences will not be saved.

## PART 2: SIGNING UP FOR A GOOGLE ACCOUNT (FOR THOSE THAT DO NOT HAVE AN EXISTING GMAIL ACCOUNT)

**1 GO TO WWW.GMAIL.COM TO CREATE A NEW ACCOUNT.**

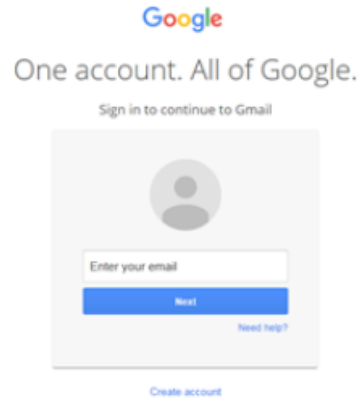


**2 FILL IN YOUR NAME, DATE OF BIRTH, ETC.**

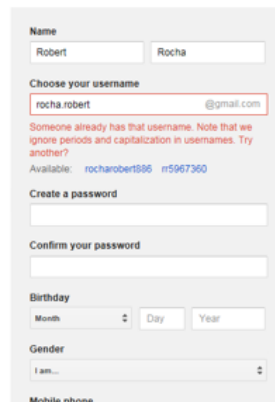

**Note: The hardest part is finding a username that you like and does not already exist.**

**3 TYPE THE TEXT THAT IS SHOWN & AGREE TO THE TERMS OF SERVICE.**

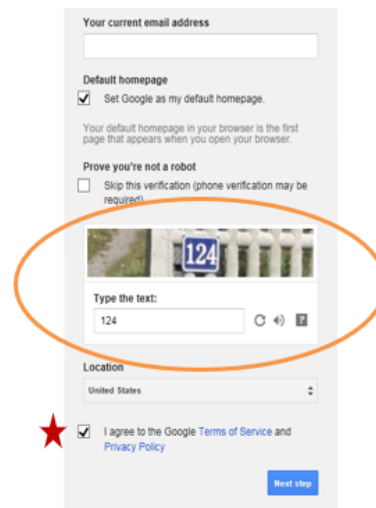

**4 CLICK 'NEXT STEPS.'**

# GALAXY TABLET QUICK START GUIDE


## PART 3: GETTING TO KNOW YOUR TABLET

### 1 THE TABLET

See this diagram for the location of the keys and ports of your tablet.


 
### 2 THE HOMESCREEN

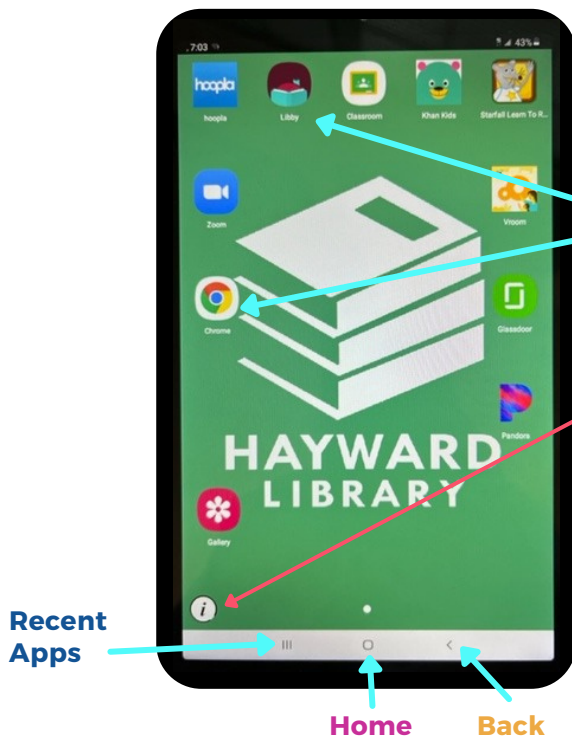

#### Side Key

Press the side button to turn off the screen, or to turn on the screen, and then swipe the screen to unlock it.

#### Apps

Tap the app icon gently to open an application.

 
#### Settings

Touch the icon to change some settings.

#### Recent Apps, Home and Back

These features will help you find apps that are already open on the tablet, or can take you back to a previous screen, or return to the home page.

## 3 THE SETTINGS MENU

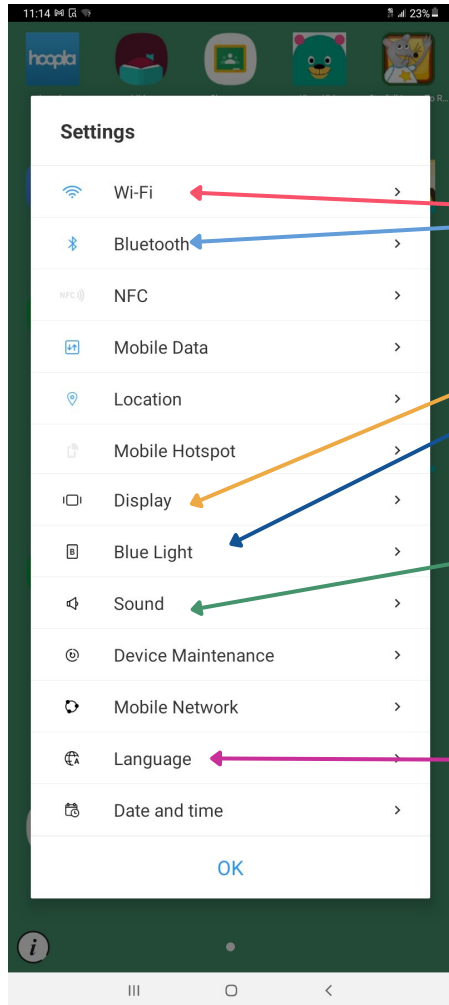

Some settings on your tablet can be changed. Touch the menu item to open the settings options.


Turn the **Wi-Fi** or the **Bluetooth** on or off.

Change the **brightness** of the screen or turn on a **blue light filter** for using the tablet at night.

Change the **volume** of the tablet features, or change to **vibrate mode** or **mute**.

Change the **language** display.

## CONNECTING TO WI-FI

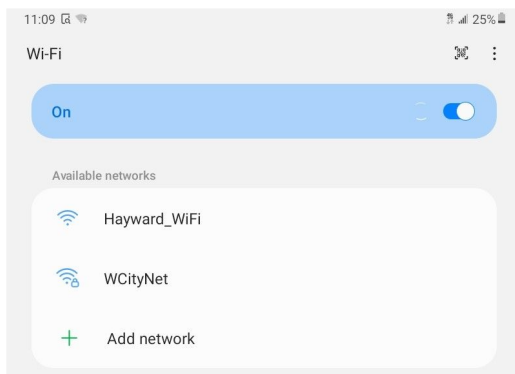 


Your tablet does not need to be connected to Wi-Fi to function, but it is an option.

When turned "On," a list of available networks will appear. To connect to an available network, simply tap the network name. A lock symbol means you will need a password.

## 3 THE SETTINGS MENU, CONTINUED

### CONNECTING TO BLUETOOTH

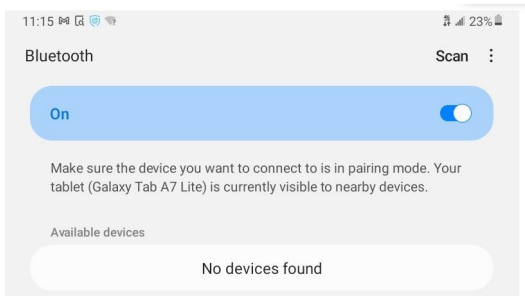



By clicking on the Bluetooth menu option in Settings, you will have the option to turn Bluetooth capabilities "On." Tap "Scan" in the top right corner to search for devices to be paired. If there are devices available, they will appear on the list of "Available Devices." Simply tap the device name to connect to Bluetooth.

### ADJUSTING THE LANGUAGE

The default language will be English. Click "+ Add Language" for more language options. A list of 10 languages will appear.



If you need a language not listed in the first list, click the three dots in the top right corner and select "All Languages." This will bring up a much larger list of languages to choose from.

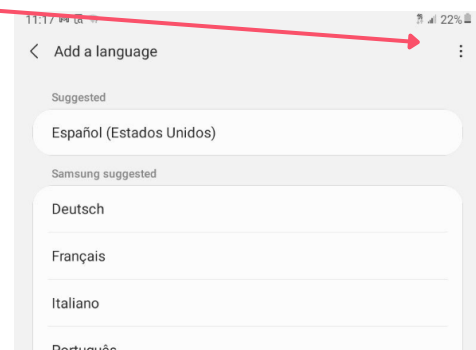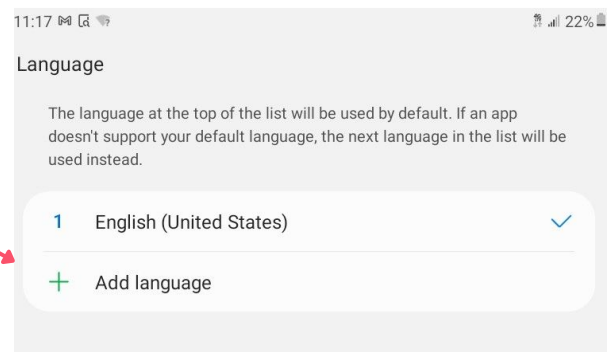Tap the language to set it as the default language.



## 5 SHUTTING DOWN OR RESTARTING




- Press and hold the **Side** key to turn the device on.
  - To turn the device off, press and hold the **Side** and **Volume down** keys at the same time, and tap  **Power off**. Confirm when prompted.
  - To restart your device, press and hold the **Side** and **Volume down** keys at the same time, and tap  **Restart**. Confirm when prompted.

## 6 CHARGING YOUR TABLET

### Charge the battery

Your device is powered by a rechargeable battery.

-  **TIP** While charging, the device and the charger may become hot and stop charging. This usually does not affect the device's lifespan or performance and is in the device's normal range of operation. Disconnect the charger from the device and wait for the device to cool down. For more information, visit [samsung.com/us/support/answer/ANS00076952](https://samsung.com/us/support/answer/ANS00076952).

Only use the cord that comes with your tablet to charge the battery. Do not use other cords, even if they may fit.