



CHROMEBOOK

快速啟動指南




部分1: 開始




1 啟動CHROMEBOOK

Chromebook啟動只需八秒鐘。很簡單，打開蓋子，按右上角的開關鍵。

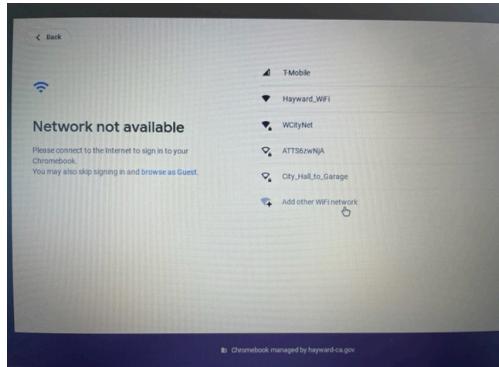

2 連接到 WI-FI 網絡

 從網頁選單中選取您想使用的網絡名。可供借用的 **Chromebook** 必須連接到外部 WiFi 來源（蜂窩數據不隨設備提供）才能連接到網路。



3 開啟谷歌賬號或以客戶身份瀏覽

開啟谷歌賬號或以客戶瀏覽。

*如果您以自己的賬號開啟，谷歌會記住您的偏愛喜好。

*如果是客人，則不會記住偏愛喜好。

Google



CHROMEBOOK

快速啟動指南



部分2: 創建谷歌賬號 (您還沒有現存的谷歌賬號時)

- 1 點擊 "創建新賬號"。您也可以去 WWW.GMAIL.COM 創建新賬號。

Google

One account. All of Google.

Sign in to continue to Gmail

The image shows the Google sign-in page for Gmail. It features a large input field labeled "Enter your email" with a placeholder "robert@robert.com". Below it is a blue "Next" button. To the right of the input field is a link "Need help?". At the bottom of the page is a "Create account" link.

- 2 填上名字、出生日期及其他

The image shows the Google account creation form. It includes fields for Name (Robert Rocha), Choose your username (rocha.robert@gmail.com), Create a password, Confirm your password, Birthday (Month, Day, Year), Gender (I am...), and Mobile phone. A red box on the right contains the note: "Note: The hardest part is finding a username that you like and does not already exist."

- 3 鍵入顯示的文字，同意使用服務規則。

The image shows the Google account verification and terms of service page. It includes fields for Your current email address, Default homepage (Set Google as my default homepage checked), Prove you're not a robot (Skip this verification (phone verification may be required) checked), Type the text: (containing "124"), Location (United States), and I agree to the Google Terms of Service and Privacy Policy (checkbox checked). A red star icon is at the bottom left. An orange circle highlights the CAPTCHA text entry field.

- 4 點擊 '下一步'




CHROMEBOOK

快速啟動指南



部分3: 認識 CHROMEBOOK

1 主屏幕與程序菜單

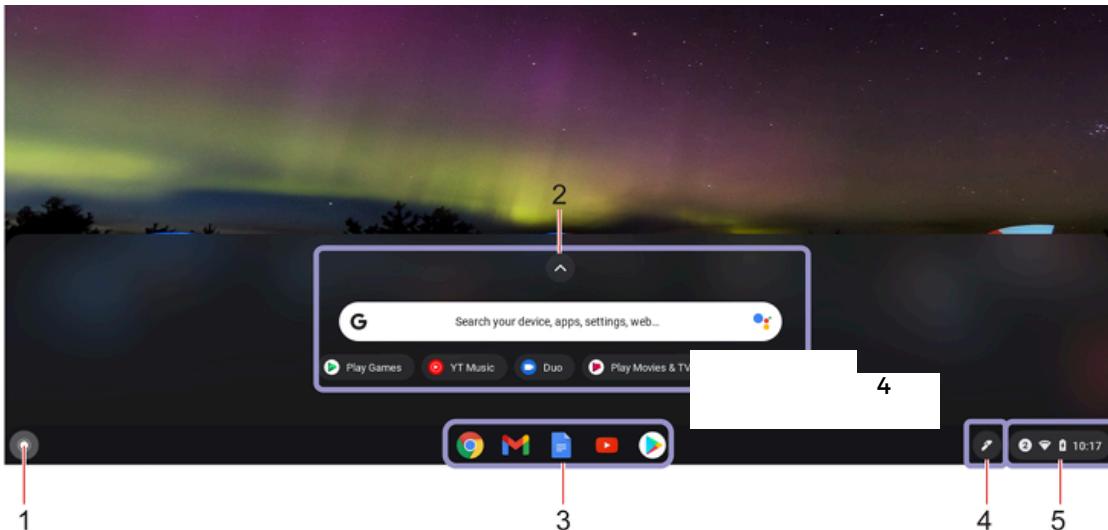

1. 啟動按鈕: 打開搜索箱和程序開啓。
2. 搜索箱和程序開啓: 鍵入您的設備名稱、程序或網頁，如看到程序名，點擊可快速進入。
3. 書架: 把您常用的程序和網頁別針在書架上，以方便使用。
4. 管理網絡鏈接、更新和設置。網絡鏈接狀態、電池量、以及時間設為自動顯示。




CHROMEBOOK

快速啟動指南



部分3: 認識您的CHROMEBOOK

3 網站瀏覽

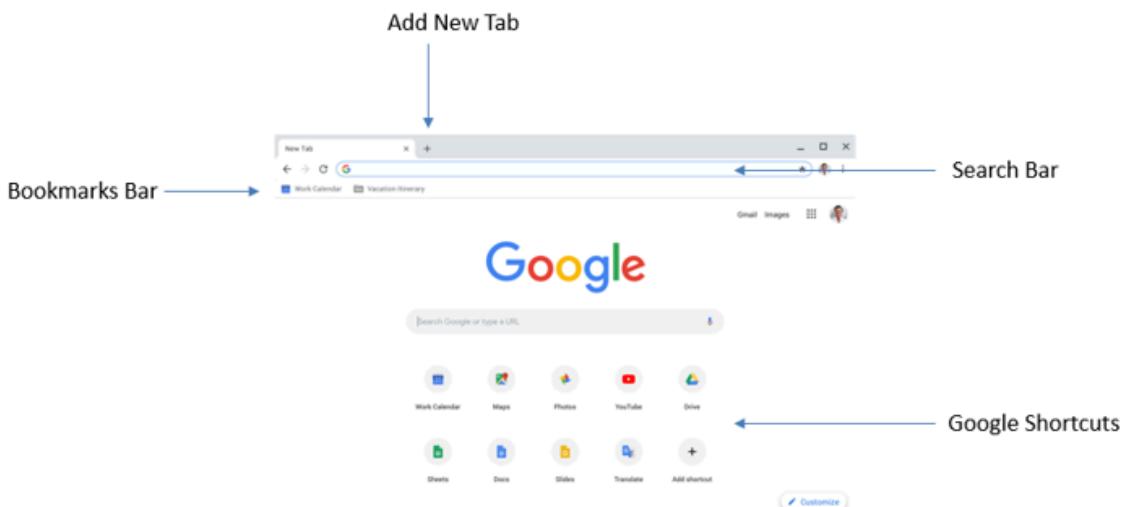

4 MANAGING BOOKMARKS

Add a bookmark

1. On your computer, open Chrome.
2. Go to the site you want to visit again in the future.
3. To the right of the address bar, click Star ⭐.

Find a bookmark

1. On your computer, open Chrome.
2. At the top right, click More ☰ > Bookmarks.
3. Find and click a bookmark.

Tip: You can open bookmarks faster with the bookmarks bar. You'll find your bookmarks under the address bar.
Click a bookmark to open it.

To turn the bookmarks bar on or off, click More ☰ > Bookmarks > Show Bookmarks Bar.

5

鍵盤



	Camera		Webcam privacy shutter
	Microphone		Power button
			Touchpad



	Camera*		Webcam privacy shutter
	Microphone*		Touch screen
			Touchpad